

Instruction Manual

HITACHI
Inspire the Next

Multi Player with GPS

Model Name

MMP-501B





Thank you for purchasing this HITACHI product.
To obtain the best performance and safety, please read this manual carefully.
Please keep this manual for future reference.



SAFETY PRECAUTIONS

For your safety, please read the following precautions carefully before using this product. Improper use will cause serious personal injuries and/or damage to your property or this product.

The following symbols are used in this manual. Please fully understand the meaning of the symbols before reading the instructions in this section.

 WARNING	Never ignore the instruction. There are risks of serious injuries or possible death to the user.
 CAUTION	Do not ignore the instruction. There are possibilities of personal injuries and/or property damage.

WARNING

- It is your sole responsibility to place, secure and use the product in a manner that will not cause accidents, personal injury or property damage. Always observe safe driving practises.
- Mount the product in a position that is secure and does not obstruct the driver's view.
- Do not mount the product in a way that may interfere with the safe operation of the vehicle, the deployment of air bags or other safety equipment.
- Do not operate the product while driving.
- Before using the product on the road, make yourself familiar with the product and its operation.
- Do not rely on the navigation system to search for medical emergency services, e.g. hospital. It is not guaranteed that the suggested route will take you to the nearest emergency services. In this case, use local information sources.
- Due to the constantly changing traffic routes, it is not guaranteed that the routes and maps are 100% accurate.
- The product is intended to be used as a travel aid and must not be used for any purpose requiring precise measurement of direction, distance, location or topography.
- Do not use the product for aircraft navigation.

CAUTION

- Do not handle the product while it is hot. Let the product cool, out of direct sunlight.
- Do not expose the product to direct sunlight for prolonged periods. Overheating may damage the product.
- To discourage theft, do not leave the product in an unattended vehicle.

Failure to adhere to these warnings and cautions may lead to death, serious injury or property damage. Hitachi disclaims all liability for installation or use of the product that causes to death, injury or property damage or that violates any law.





CONTENTS

SAFETY PRECAUTIONS	2	BASIC OPERATION	10
IMPORTANT SAFETY INSTRUCTIONS	4	Getting Started	10
FUNCTIONAL OVERVIEW	6	Navigation	10
Front View	6	Brightness Setting	10
Rear View	6	Volume Setting	11
Bottom View	6	Entertainment	12
Side View	7	Entertainment Screen Buttons	13
PREPARATION	8	Pairing the Player with Your Mobile Phone	14
Supplied Accessories	8	Handsfree Screen Buttons	17
Using the AC Power Adaptor	8	TROUBLESHOOTING	18
Using the Car Power Adaptor	8	SPECIFICATIONS	19
Using the Built-in Battery	8		
Positioning the Player in a Vehicle	9		





IMPORTANT SAFETY INSTRUCTIONS

1. Read Instructions - All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Cleaning - Unplug the product from the wall outlet or car cigarette lighter socket before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments - Only use attachments/accessories specified by the manufacturer.
7. Water and Moisture - Do not use the product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.
8. Accessories - Do not place the product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer. The product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
9. Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. The product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. Power Sources - The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
11. Grounding or Polarization - The product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. Power Cord Protection - Power cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
13. Lightning - For added protection for the product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet or car cigarette lighting socket. This will prevent damage to the product due to lightning and power-line surges.
14. Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
15. Overloading - Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.






16. Object and Liquid Entry - Never push objects of any kind into the product through any openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
 17. Servicing - Do not attempt to service the product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
 18. Damage Requiring Service - Unplug the product from the wall outlet or car cigarette lighter socket and refer servicing to qualified service personnel under the following conditions:
 - a. When the power cord or plug is damaged.
 - b. If liquid has been spilled, or objects have fallen into the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a service technician to restore the product to its normal operation.
 - e. If the product has been dropped or damaged in any way.
 - f. When the product exhibits a distinct change in performance, this indicates a need for service.
 19. Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
 20. Safety Check - Upon completion of any service or repairs to the product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
 21. Heat - Do not install the product near any heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
 22. Installation Location - Avoid placing the product in areas of direct sunlight, heating radiators, closed automobiles, high temperature, high humidity, excessive dust, strong vibration, impact or strong magnetic fields, as the internal parts may be seriously damaged.
 23. Hazards of Electrical Shock and Fire - Do not touch the power cord with wet hands. Hold the plug when disconnecting the AC adaptor. Do not pull the power cord. Unplug the AC adaptor from the wall outlet or remove the battery pack when the product is not used for long periods of time.
 24. Hearing Safety - Listen at a moderate volume. Using headphones at high volume can impair your hearing.
 25. Traffic Safety - Do not operate the product while driving or cycling as you may cause an accident.
- NOTE**
- When the product is in use for a long period of time, the surface will be heated. This is normal.
 - Sometimes, the LCD screen may have some tiny red, blue, white or black spots. This is normal and does not affect the performance.






FUNCTIONAL OVERVIEW


Front View

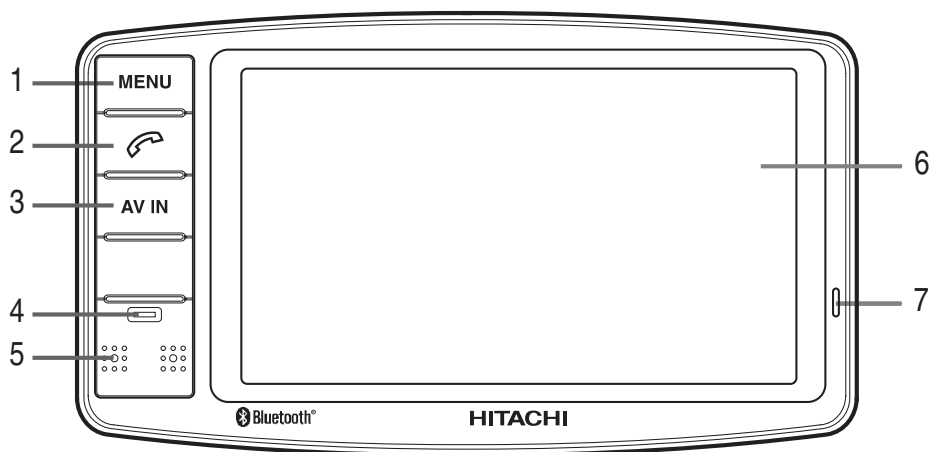

Rear View


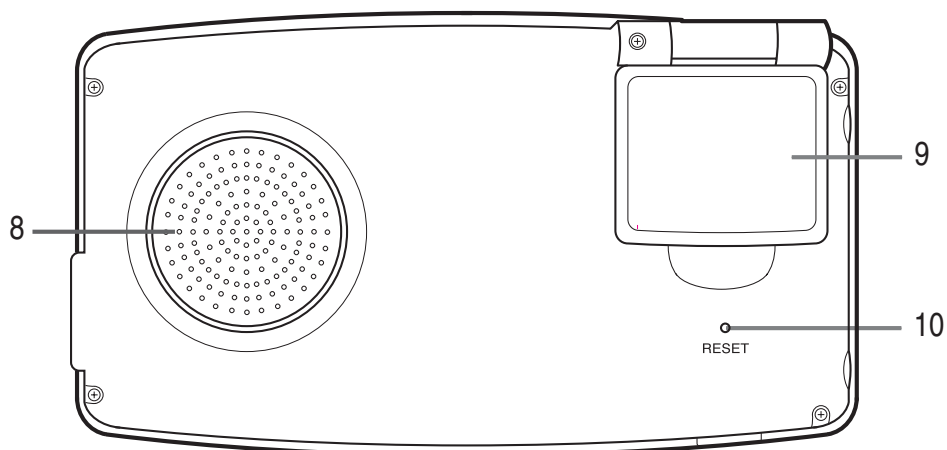


Bottom View

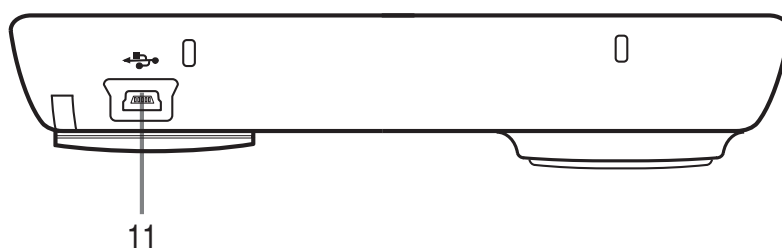



Side View

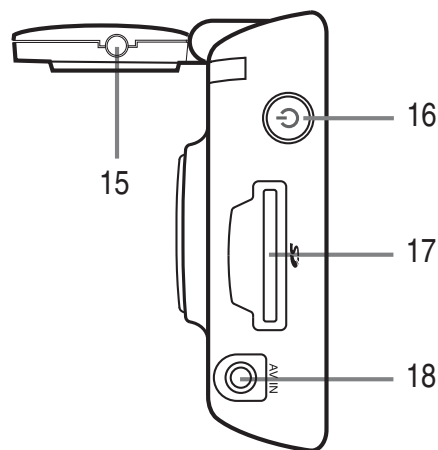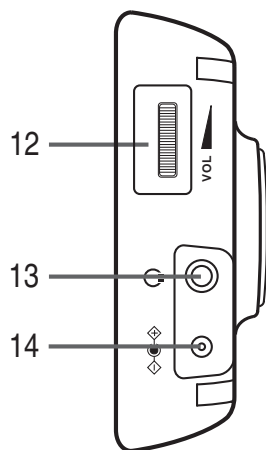

1. **MENU Button**
Displays the Top Menu.
2. **Tel (☎) Button**
Switches to the Bluetooth mode.
Answers an incoming call or ends a call made from the player in Bluetooth mode.
3. **AV IN Button**
Switches between the AV input mode and Media Player mode.
4. **Light Sensor**
Detects the changes in lighting condition and adjusts the touch screen brightness.
5. **Microphone**
6. **Touch Screen**
7. **Charge Indicator**
Indicates orange when the battery is charging.
8. **Speaker**
9. **GPS Antenna**
Receives signals from GPS satellites when lifted up to the horizontal position.
10. **RESET Button**
Resets the player.
11. **USB Socket**
Connection socket for USB cable to your computer.
12. **Volume Control Knob**
Adjusts the speaker volume.
13. **Earphone Socket**
Connection socket for earphones.
14. **Power Socket**
Connection socket for AC power adaptor or car power adaptor.
15. **External Antenna Socket**
Connection socket for external GPS antenna.
16. **Power Button**
Turns the player on or off.
17. **Card Slot**
Slot for SD or MMC memory card.
18. **AV IN Socket**
Connection socket for AV input.





PREPARATION

Supplied Accessories

When you unpack the player, please check to ensure the following accessories are supplied before installation. In case of missing or damaged, please contact the dealer immediately.

- User manual (x2)
- AC power adaptor (x1)
- Car power adaptor (x1)
- USB cable (x1)
- AV cable (x1)
- Earphones (x1)
- Suction cup windscreen mount (x1)
- Mounting bracket (x1)
- Warranty card (x1)
- CD-ROM (x1)
- Velvet pouch (x1)

Using the AC Power Adaptor

1. Connect the AC power adaptor to the power socket on the player.
2. Connect the plug of the AC power adaptor to the wall outlet.

Using the Car Power Adaptor

1. Connect the car power adaptor to the power socket on the player.
2. Connect the other end of the car power adaptor to the car cigarette lighter socket.

Using the Built-in Battery

To Charge the Battery

When the battery is charging, the Charge Indicator is orange. When the battery is fully charged, the Charge Indicator turns off.

- To charge the player using an electrical wall outlet, connect the AC power adaptor to the player and the wall outlet.
- To charge the player in a vehicle, connect the car power adaptor to the player and the car cigarette lighter socket.

NOTE

- Do not disconnect the AC power adaptor or car power adaptor during charging.
- The charging time of a battery is about 3.5 hours and it depends on the environmental conditions.
- The fully charged battery provides about 5 hours of navigation operation.
- It is normal for the battery to become warm during charging.
- The battery can be charged when the player is turned on. The charging time will be longer.
- Regular recharging a partially charged battery does not cause harm.
- Do not use the battery under high temperature or near heat sources.
- The battery should be used at environmental temperature of 5°C to 35°C.
- Do not dispose the battery in fire, water or heat it up.
- To prolong the battery life, if it is not used for a long period of time, it should be charged for about 30 minutes before turning on the player.
- To prolong the battery life, charge it under or close to indoor temperature.





Positioning the Player in a Vehicle

The player can be positioned on the inside of the vehicle windscreen using the supplied suction cup windscreen mount and mounting bracket.

1. Attach the mounting bracket onto the suction cup windscreen mount. Ensure the mounting bracket is secured onto the suction windscreen mount.



2. Find a suitable position on your windscreen where the player will be visible to the driver.
3. Wipe the windscreen area that the suction cup will be mounted to.



4. Press the suction cup firmly to the windscreen, then push the lever towards the windscreen.



5. Place the player onto the mounting bracket. Ensure the player is secured onto the mounting bracket.



6. Adjust the vertical and horizontal adjustment knob of the suction cup windscreen mount so that the player will be visible to the driver.
7. Lift up the GPS antenna to the horizontal position and the player is ready to be used.



⚠ WARNING

- Mount the player in a position that is secure and does not obstruct the driver's view.
- Do not mount the player in a way that may interfere with the safe operation of the vehicle, the deployment of air bags or other safety equipment.



BASIC OPERATION

Getting Started

- Press the **Power** button for a while to turn on the player.
- The Top Menu appears on the touch screen.



NOTE

- You can return to the Top Menu any time by pressing the **MENU** button.

Navigation

- Tap **Map** on the Top Menu to enter navigation mode.

The Destinator Menu will be displayed.



NOTE

- Please refer to Hitachi Destinator User Manual for the navigation operation.
- Tap **Quit** to quit Destinator and return to the Top Menu.

Brightness Setting

The player has a light sensor that will detect the changes in lighting condition and adjust the brightness for optimum viewing level automatically. You may adjust the brightness level manually.

- Tap **Settings** on the Top Menu to enter Brightness Setting.



To Activate the Auto Brightness

- Tap **AUTO** to activate the Auto Brightness.

The Brightness Setting screen will be displayed.



The brightness of the touch screen will be adjusted according to the lighting condition automatically.

- Tap **Back** to return to the Top Menu.

To Adjust the Brightness Manually

- Tap **MANUAL**, **+** or **-** to access the brightness control.
- Tap **+** or **-** to adjust the brightness of the touch screen.
- Tap **Back** to return to the Top Menu.



Volume Setting

1. Rotate the volume control knob to adjust the volume.

The speaker icon appears on the touch screen.



2. Press the volume control knob to mute the sound.

The mute icon appears on the touch screen.



3. Rotate or press the volume control knob again to restore the sound.





Entertainment

You can play the audio, video or picture files stored in SD or MMC memory card.

1. Insert the SD or MMC memory card to the card slot.
2. Tap **Media** on the Top Menu to enter media player mode.

The SDMMC DISK folder will be displayed.



3. Tap SDMMC DISK folder to open it.

The folder list will be displayed.



4. Tap a folder to open it; or tap a file to play it.

To Play an Audio or Video File

1. Tap the Music or Film folder to open it.



2. Select and tap the file to play it.



NOTE

- While a video is playing, tap the video to toggle between the two screen size display modes.

To Play a Picture File

1. Tap the Picture folder to open it.



2. Select and tap the file to play it.



NOTE







 
- While displaying a picture, tap the picture to toggle between the two screen size display modes.











Entertainment Screen Buttons





 
 


The following buttons appear on the Folder screens.

Buttons	Description
	Tap to return to the Top Menu.
	Tap to display the entertainment interfere.
	Tap to scroll up the folder list or file list.
	Tap to scroll down the folder list or file list.
	Tap to show the file list in thumbnail mode.
	Tap to resume the file list.
	Tap to return to the folder list.

The following buttons appear on the Picture Media screens.

Buttons	Description
	Tap to play the previous picture.
	Tap to play the pictures continuously.
	Tap to play the next picture.
	Tap to rotate the current picture 90° anticlockwise.
	Tap to rotate the current picture 90° clockwise.
	Tap to return to the file list.

The following buttons appear on the Audio and Video Media screens.

Buttons	Description
	Tap to play a file or all files repeatedly.
	Tap to play the files in random order.
	Tap to play the previous file.
	Tap to resume the playback.
	Tap to pause the playback.
	Tap to play the next file.
	Tap to stop the playback.
	Tap to return to the file list.



Pairing the Player with Your Mobile Phone

The player is also a Bluetooth device. Before you can connect it to your mobile phone with Bluetooth, you need to pair them.

1. Press the  button on the panel or tap  on the Top Menu to enter Bluetooth mode.

The Handsfree screen will display.




2. Tap  on the Handsfree screen to make the player discoverable.



NOTE

- Tap the touch screen to close the hint.
 - The hint will disappear if pairing exceeded 90 seconds.
3. Use your mobile phone to search/pair the player.

4. Once the connection has completed, the  symbol appears. You can use the player to make or receive calls.





NOTE

- Please refer to your mobile phone User Manual for the pairing instructions.
- During the pairing, you would be prompted for a passcode on your mobile phone. Enter **1234** as the passcode.
- If you have established a connection between your mobile phone and the player, once your mobile phone Bluetooth is turned on, it will connect with the player directly.

To Make a Call


1. Tap the numbers (0~9) on the Handsfree screen to enter the phone number.



2. Tap  to make the call.
3. Tap  to end the call.



To Accept or Reject a Call

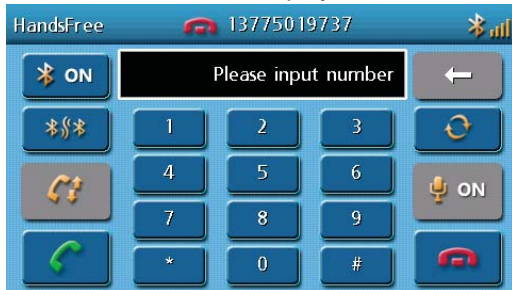1. When there is an incoming call in Bluetooth mode, the screen will display.



2. When there is an incoming call in navigation mode, the screen will display.




3. Tap  to accept the call or tap  to reject the call.

NOTE

- Sometimes, the dialled number from your mobile phone or caller number will not be displayed.


To Display Call Record

1. Tap  on the Handsfree screen to display the call record.

 
 


2. Tap a record number to make a call.



3. Tap  to delete the telephone number in the call record.



4. Tap  to confirm to delete or  to cancel.

Call Waiting Call

Call waiting lets you know someone else is trying to call you, by displaying "Call Waiting..." while you are on a call.

1. When there is a call waiting call in Bluetooth mode, the screen will display.




2. When there is a call waiting call in navigation mode, the screen will display.

 


Bluetooth Link Loss

1. When the mobile phone is far away from the player, the Bluetooth signal will be weak and the connection will be lost. The player will reconnect your mobile phone.

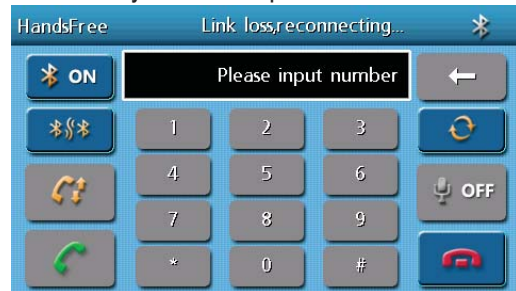



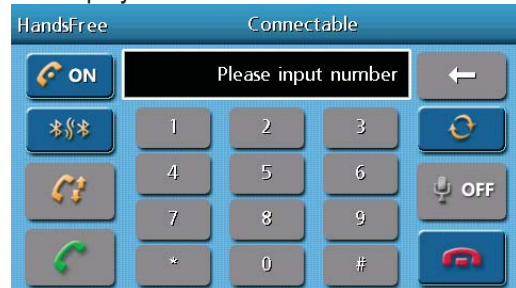






2. If the reconnection failed 6 times, the screen will display.








Handsfree Screen Buttons

The following buttons appear on the Handsfree screen.

Buttons	Description
	Tap to turn the Bluetooth on or off.
	Tap to make the player discoverable.
	Tap to display the call record.
	Tap to scroll up the call list.
	Tap to scroll down the call list.
	Tap to clear the telephone numbers in the call list.
	Tap to make or answer a call. NOTE <ul style="list-style-type: none">If you have not entered any telephone number on the Handsfree screen, tap this button will dial the last call number in your mobile phone call record.
	Tap to end or reject a call. NOTE <ul style="list-style-type: none">When there is no call, tap this button will return to the previous interface.
	Tap to delete the entered number.

	Tap to turn on/off the microphone and switch between the player and your mobile phone during a call. NOTE <ul style="list-style-type: none">When calling is switched to the player, this button will be changed to .
	Tap to pair with the last connected mobile phone quickly. NOTE <ul style="list-style-type: none">If your mobile phone connected with the player, tap this button will disconnect them.

NOTE

- The buttons will be greyed out if they are not available.





TROUBLESHOOTING

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help you remedy the problem. Should any problem persist, consult your nearest service center.

Symptom	Possible Cause	Remedy
The player does not start.	The battery may be exhausted.	Recharge the battery.
	The AC power plug or the car power adaptor may be loose or not plugged in.	Ensure the AC power plug is secured into the wall outlet or the car power adaptor is secured into the car cigarette lighter socket.
The player does not have sound.	The volume is set to minimum.	Increase the volume level.
The touch screen is too dark.	The touch screen is not bright enough.	Increase the brightness level.
The player does not receive GPS signals.	The GPS antenna is unable to receive signal.	<p>Check the position of the player in the vehicle. The GPS antenna requires a clear view of sky to receive information from the GPS satellites.</p> <p>Ensure the GPS antenna is in the horizontal position. If the player is used in a vehicle with heated or heat-reflecting windscreen, connect it with an external antenna in order to receive the GPS signals.</p>
The player has lost GPS reception.	The player is experiencing poor GPS coverage.	The GPS signal is interrupted due to tunnels, tall buildings, snowing, etc. When the obstruction is cleared, the player should re-acquire satellite signals in a few seconds.





SPECIFICATIONS

GPS Section

Received Center Frequency	1575.42 MHz
GPS Satellites	20
Refresh Frequency	1/sec

TFT LCD Monitor

Size	5 inch
Resolution (H x V)	480 x 272 (RGB)

Main Unit

Dimensions	148 x 85 x 34 mm
Weight	335g

Specification are subject to change without notice for improvement.





HITACHI

Inspire the Next

